

Franke Triflow Equivalents

Cartridge Replacement


The cartridge in your Franke Triflow filter needs to be changed every six months. At this stage, the 'Matrix' carbon filter element begins to lose its effectiveness against lead, cysts, turbidity, chlorine, taste and odour.

Changing the cartridge is a simple matter:

- 1 Shut-off the mains water supply. A stop valve was supplied with the system for this purpose, and will be found located on the adjacent pipe work.
- 2 Turn the Filtered lever on the faucet to the ON position. This will confirm that the water supply is turned off, and release the pressure in the system.
- 3 Conveniently position a suitable receptacle to catch residual water from the housing. Lift the filter unit from its retaining bracket. Slide housing off of filter cartridge and place to one side.
- 4 Hold the Cap 'B' firmly with one hand; unscrew the Cartridge 'C'. Discard the old cartridge with your household waste, either wrapped in newspaper, or placed in a polythene bag.
- 5 Wash Housing 'A' in warm soapy water, then rinse well.
- 6 Wet the two 'O' seals 'D' on the threaded end of the new cartridge, then screw it carefully into the female thread in the Cap 'B'. Please note: The cartridge is fragile and can be easily damaged if not handled carefully. Therefore care should be taken when screwing the cartridge into the housing cap. Be careful not to cross thread or over tighten the cartridge.
- 7 Fit Cap 'B' and Housing 'A' back together and turn a quarter turn in the opposite direction of the arrow shown to lock.
- 8 Replace the unit on the bracket and turn on the water supply.
- 9 Run the filtered water for 2 minutes to flush the system, and check carefully for leaks. The system should now be ready for use.

To Winterize the Unit

If you plan to be away from home for extended periods, or the filter housing may be subject to the risk of freezing, carry out the procedures 1, 2, 3, 5 and 7 as above. When the risk of freezing subsides and you wish to use the system again, open the mains supply to the filter. Run the filtered water for 2 minutes to flush the system and check carefully for leaks. The system should now be ready for use. Allowing the unit to freeze will invalidate the product warranty.

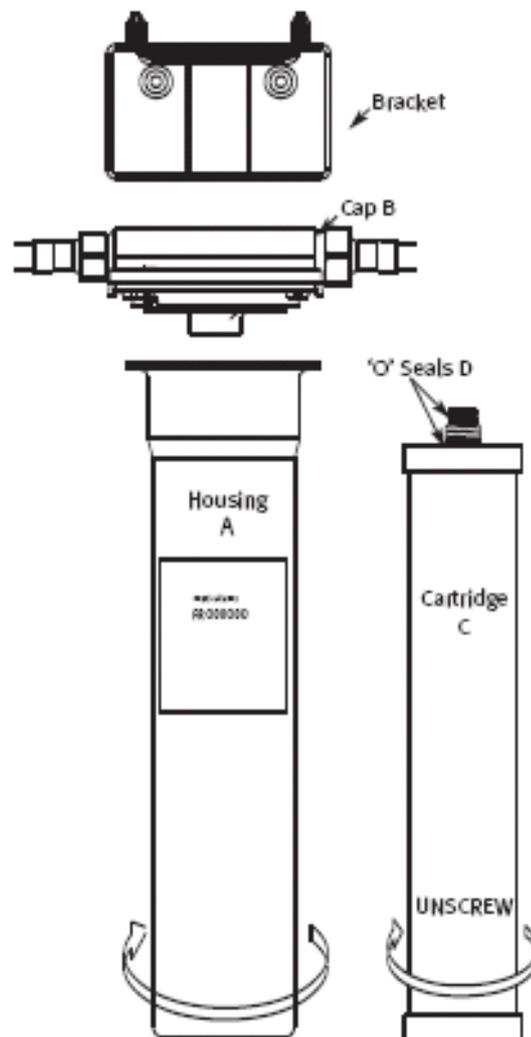

The FreshWater Filter Company Ltd

Carlton House, Aylmer Road, Leytonstone, London. E11 3AD.

Telephone +44(0)208 558 7495 mail@freshwaterfilter.co.uk www.freshwaterfilter.com

Registered in England Company No. 3268435

Franke Triflow Equivalents

Cartridge Replacement

The cartridge in your Franke Triflow filter needs to be changed every six months. At this stage, the 'Matrix' carbon filter element begins to lose its effectiveness against lead, cysts, turbidity, chlorine, taste and odour.

Changing the cartridge is a simple matter:

1 Shut-off the mains water supply to the filter. A stop-valve was supplied with the system for this purpose, and will be found located on the adjacent pipe work.

2 Turn the Filtered lever on the tap to the ON position. This will confirm that the water supply is turned off, and release the pressure in the system.

3 Conveniently position a suitable receptacle to catch residual water from the housing. Lift the Filter Unit from its retaining bracket, holding Cap 'B' unscrew Housing 'A' in the direction of the arrow shown.

4 Hold the Cap 'B' firmly with one hand, unscrew the Cartridge 'C'. Discard the old cartridge with your household waste, either wrapped in newspaper, or placed in a polythene bag.

5 Wash Housing 'A' in warm soapy water then rinse well.

6 Wet the two 'O' seals 'D' on the threaded end of the new cartridge, then screw it carefully into the female thread in the Cap 'B'. Please note: The cartridge is fragile and can be easily damaged if not handled carefully. Therefore care should be taken when screwing the cartridge into the housing cap. Be careful not to cross thread or over tighten the cartridge.

7 Finally, screw Cap 'B' and Housing 'A' back together. DO NOT use any greases or solvents containing hydrocarbons to lubricate the threads on this unit. Replace the unit on the bracket and turn on the water supply.

8 Run the filtered water for 2 minutes to flush the system, and check carefully for leaks. The system should now be ready for use.

To Winterize the Unit If you plan to be away from home for extended periods, or the filter housing may be subject to the risk of freezing, the following procedure must be carried out:

1 Follow procedures 1-3 as above.

2 Discard residual water from the cartridge housing.

3 Wash Housing 'A' in warm soapy water, then rinse well.

4 Finally, screw Cap 'B' (complete with Cartridge 'C') and Housing 'A' back together. DO NOT use any greases or solvents containing hydrocarbons to lubricate the threads on this unit. Replace the unit on the bracket.

5 When the risk of freezing subsides and you wish to use the system again, open the mains supply to the filter. Run the filtered water for 2 minutes to flush the system and check carefully for leaks. The system should now be ready for use. Allowing the unit to freeze will invalidate the product guarantee.

